

---

# UNIVERSAL FIRMWARE VERSION 5.1.2 UPGRADE PROCEDURE (FROM 5.0.3 BETA)

**!!! THIS UPDATE PACKAGE IS FOR USE ONLY WITH 5.0.3. BETA !!!**

**!!! DO NOT USE WHEN YOU ARE RUNNING DIFFERENT FIRMWARE VERSIONS !!!**

## UPGRADE PROCEDURE

### **Note:**

Upgrading to 5.1.2 from 5.0.3 BETA version is possible only locally with file upload. Online update over NETIO cloud service is not possible.

1. Open web browser and connect to your device.
2. Upgrade your device with the package "01\_step\_universal\_firmware-5.0.4-d2d85f16.package" (this can take up to 5 minutes).
3. Refresh the browser by pressing CTRL+F5 (or click to reload) and log in.
4. Upgrade your device with the package "02\_step\_universal\_firmware-5.1.2-0a32cf67.package" (this can take up to 5 minutes).
5. Refresh the browser by pressing CTRL+F5 (or click to reload) and log in.
6. Verify firmware version of your device. There should be installed 5.1.2 version
7. Your device is updated

In case of any problems or questions please visit [www.netio-products.com](http://www.netio-products.com) or contact the support at [support@netio.eu](mailto:support@netio.eu).